

HISTORIC AND DESIGN REVIEW COMMISSION

July 07, 2021

HDRC CASE NO: 2021-311
ADDRESS: 225 W WILDWOOD
LEGAL DESCRIPTION: NCB 9013 BLK 7 LOT 59 60, 61 & W 12.5 FT OF 58
ZONING: R-4, H
CITY COUNCIL DIST.: 1
DISTRICT: Olmos Park Terrace Historic District
APPLICANT: MAHROU ANA
OWNER: MAHROU ANA
TYPE OF WORK: Fenestration modification
APPLICATION RECEIVED: June 15, 2021
60-DAY REVIEW: Not applicable due to City Council Emergency Orders
CASE MANAGER: Rachel Rettaliata

REQUEST:

The applicant is requesting a Certificate of Appropriateness for approval to replace a rear door with a wood window.

APPLICABLE CITATIONS:

Historic Design Guidelines, Chapter 2, Exterior Maintenance and Alterations

2. Materials: Masonry and Stucco

A. MAINTENANCE (PRESERVATION)

- i. *Paint*—Avoid painting historically unpainted surfaces. Exceptions may be made for severely deteriorated material where other consolidation or stabilization methods are not appropriate. When painting is acceptable, utilize a water permeable paint to avoid trapping water within the masonry.
- ii. *Clear area*—Keep the area where masonry or stucco meets the ground clear of water, moisture, and vegetation.
- iii. *Vegetation*—Avoid allowing ivy or other vegetation to grow on masonry or stucco walls, as it may loosen mortar and stucco and increase trapped moisture.
- iv. *Cleaning*—Use the gentlest means possible to clean masonry and stucco when needed, as improper cleaning can damage the surface. Avoid the use of any abrasive, strong chemical, sandblasting, or high-pressure cleaning method.

B. ALTERATIONS (REHABILITATION, RESTORATION, AND RECONSTRUCTION)

- i. *Patching*—Repair masonry or stucco by patching or replacing it with in-kind materials whenever possible. Utilize similar materials that are compatible with the original in terms of composition, texture, application technique, color, and detail, when in-kind replacement is not possible. EIFS is not an appropriate patching or replacement material for stucco.
- ii. *Repointing*—The removal of old or deteriorated mortar should be done carefully by a professional to ensure that masonry units are not damaged in the process. Use mortar that matches the original in color, profile, and composition when repointing. Incompatible mortar can exceed the strength of historic masonry and results in deterioration. Ensure that the new joint matches the profile of the old joint when viewed in section. It is recommended that a test panel is prepared to ensure the mortar is the right strength and color.
- iii. *Removing paint*—Take care when removing paint from masonry as the paint may be providing a protectant layer or hiding modifications to the building. Use the gentlest means possible, such as alkaline poultice cleaners and strippers, to remove paint from masonry.
- iv. *Removing stucco*—Remove stucco from masonry surfaces where it is historically inappropriate. Prepare a test panel to ensure that underlying masonry has not been irreversibly damaged before proceeding.

6. Architectural Features: Doors, Windows, and Screens

A. MAINTENANCE (PRESERVATION)

- i. *Openings*—Preserve existing window and door openings. Avoid enlarging or diminishing to fit stock sizes or air conditioning units. Avoid filling in historic door or window openings. Avoid creating new primary entrances or window openings on the primary façade or where visible from the public right-of-way.
- ii. *Doors*—Preserve historic doors including hardware, fanlights, sidelights, pilasters, and entablatures.

- iii. *Windows*—Preserve historic windows. When glass is broken, the color and clarity of replacement glass should match the original historic glass.
- iv. *Screens and shutters*—Preserve historic window screens and shutters.
- v. *Storm windows*—Install full-view storm windows on the interior of windows for improved energy efficiency. Storm window may be installed on the exterior so long as the visual impact is minimal and original architectural details are not obscured.

B. ALTERATIONS (REHABILITATION, RESTORATION, AND RECONSTRUCTION)

- i. *Doors*—Replace doors, hardware, fanlight, sidelights, pilasters, and entablatures in-kind when possible and when deteriorated beyond repair. When in-kind replacement is not feasible, ensure features match the size, material, and profile of the historic element.
- ii. *New entrances*—Ensure that new entrances, when necessary to comply with other regulations, are compatible in size, scale, shape, proportion, material, and massing with historic entrances.
- iii. *Glazed area*—Avoid installing interior floors or suspended ceilings that block the glazed area of historic windows.
- iv. *Window design*—Install new windows to match the historic or existing windows in terms of size, type, configuration, material, form, appearance, and detail when original windows are deteriorated beyond repair.
- v. *Muntins*—Use the exterior muntin pattern, profile, and size appropriate for the historic building when replacement windows are necessary. Do not use internal muntins sandwiched between layers of glass.
- vi. *Replacement glass*—Use clear glass when replacement glass is necessary. Do not use tinted glass, reflective glass, opaque glass, and other non-traditional glass types unless it was used historically. When established by the architectural style of the building, patterned, leaded, or colored glass can be used.
- vii. *Non-historic windows*—Replace non-historic incompatible windows with windows that are typical of the architectural style of the building.
- viii. *Security bars*—Install security bars only on the interior of windows and doors.
- ix. *Screens*—Utilize wood screen window frames matching in profile, size, and design of those historically found when the existing screens are deteriorated beyond repair. Ensure that the tint of replacement screens closely matches the original screens or those used historically.
- x. *Shutters*—Incorporate shutters only where they existed historically and where appropriate to the architectural style of the house. Shutters should match the height and width of the opening and be mounted to be operational or appear to be operational. Do not mount shutters directly onto any historic wall material.

FINDINGS:

- a. The primary structure located at 225 W Wildwood is a 1-story, single-family residence constructed circa 1930. The home features a side gable composition shingle roof, an enclosed front porch entry with a front gable roof and a prominent chimney, one-over-one windows, and rock cladding typical for the historic district. The property is contributing to the Olmos Park Terrace Historic District.
- b. FENESTRATION MODIFICATION – The applicant has proposed to replace an existing door opening on the rear elevation with a custom-made wood window to accommodate the conversion of the garage into interior living space. The proposed window is requested to be installed above the existing door frame. Guideline 6.B.i for Exterior Maintenance and Alterations states that existing door openings should be preserved. Avoid enlarging or diminishing to fit stock sizes. Avoid filling in historic door or window openings. Staff finds the proposal inconsistent with the Guidelines. Replacing the existing door with a window within the area of the existing door frame is eligible for administrative approval.

RECOMMENDATION:

Staff does not recommend approval of the fenestration modification based on finding b. The installation of a window within the frame of the existing door opening is eligible for administrative approval.

If the HDRC is compelled to approve the request, staff recommends the following stipulation:

- i. That the applicant installs a fully wood window that meet staff's standard window stipulations and submits updated specifications to staff for review and approval. The window should feature an inset of two (2) inches within facades and should feature profiles that are found historically within the immediate vicinity. Meeting rails must be no taller than 1.25" and stiles no wider than 2.25". White manufacturer's color is not allowed, and color selection must be presented to staff. There should be a minimum of two inches in depth between the front face of the window trim and the front face of the top window sash. This must be accomplished by recessing the window


sufficiently within the opening or with the installation of additional window trim to add thickness. Window trim must feature traditional dimensions and architecturally appropriate sill detail. Window track components must be painted to match the window trim or concealed by a wood window screen set within the opening.

City of San Antonio One Stop




June 11, 2021

— User drawn lines




Google Maps 225 W Wildwood

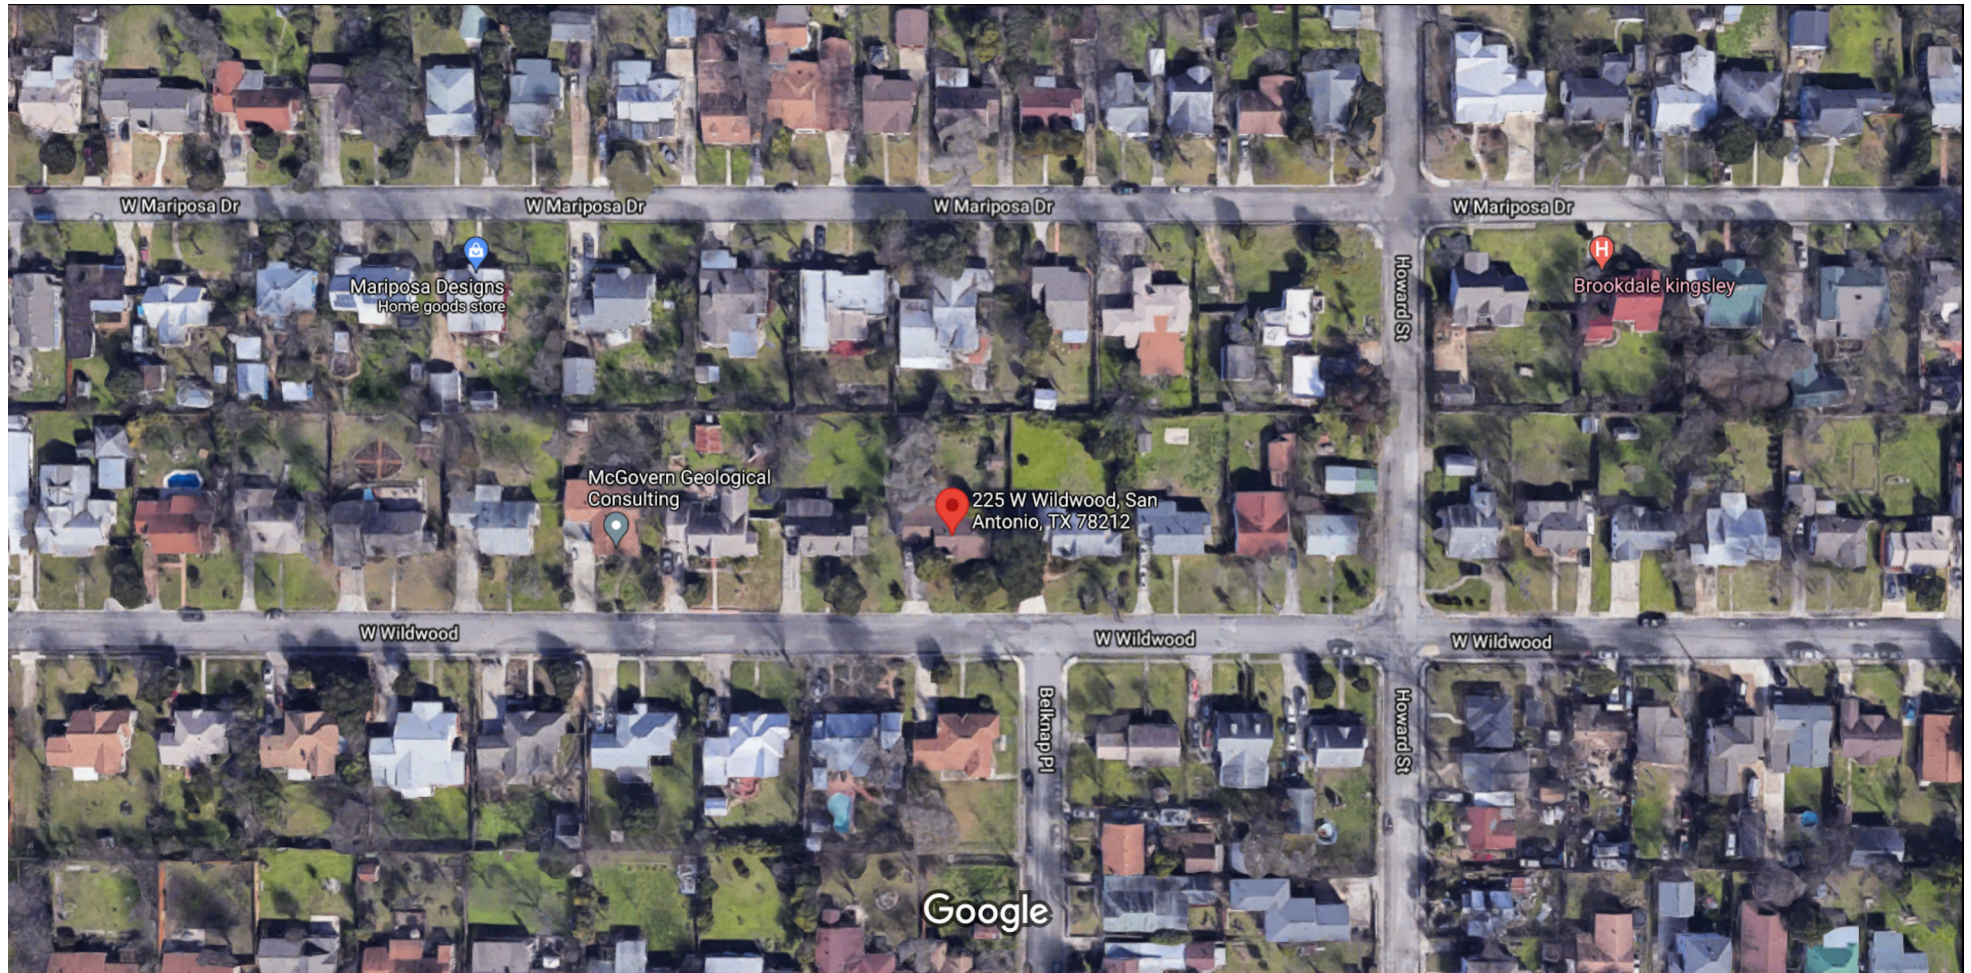


Imagery ©2021 Google, Imagery ©2021 CAPCOG, Maxar Technologies, Map data ©2021 100 ft

Google Maps 225 W Wildwood

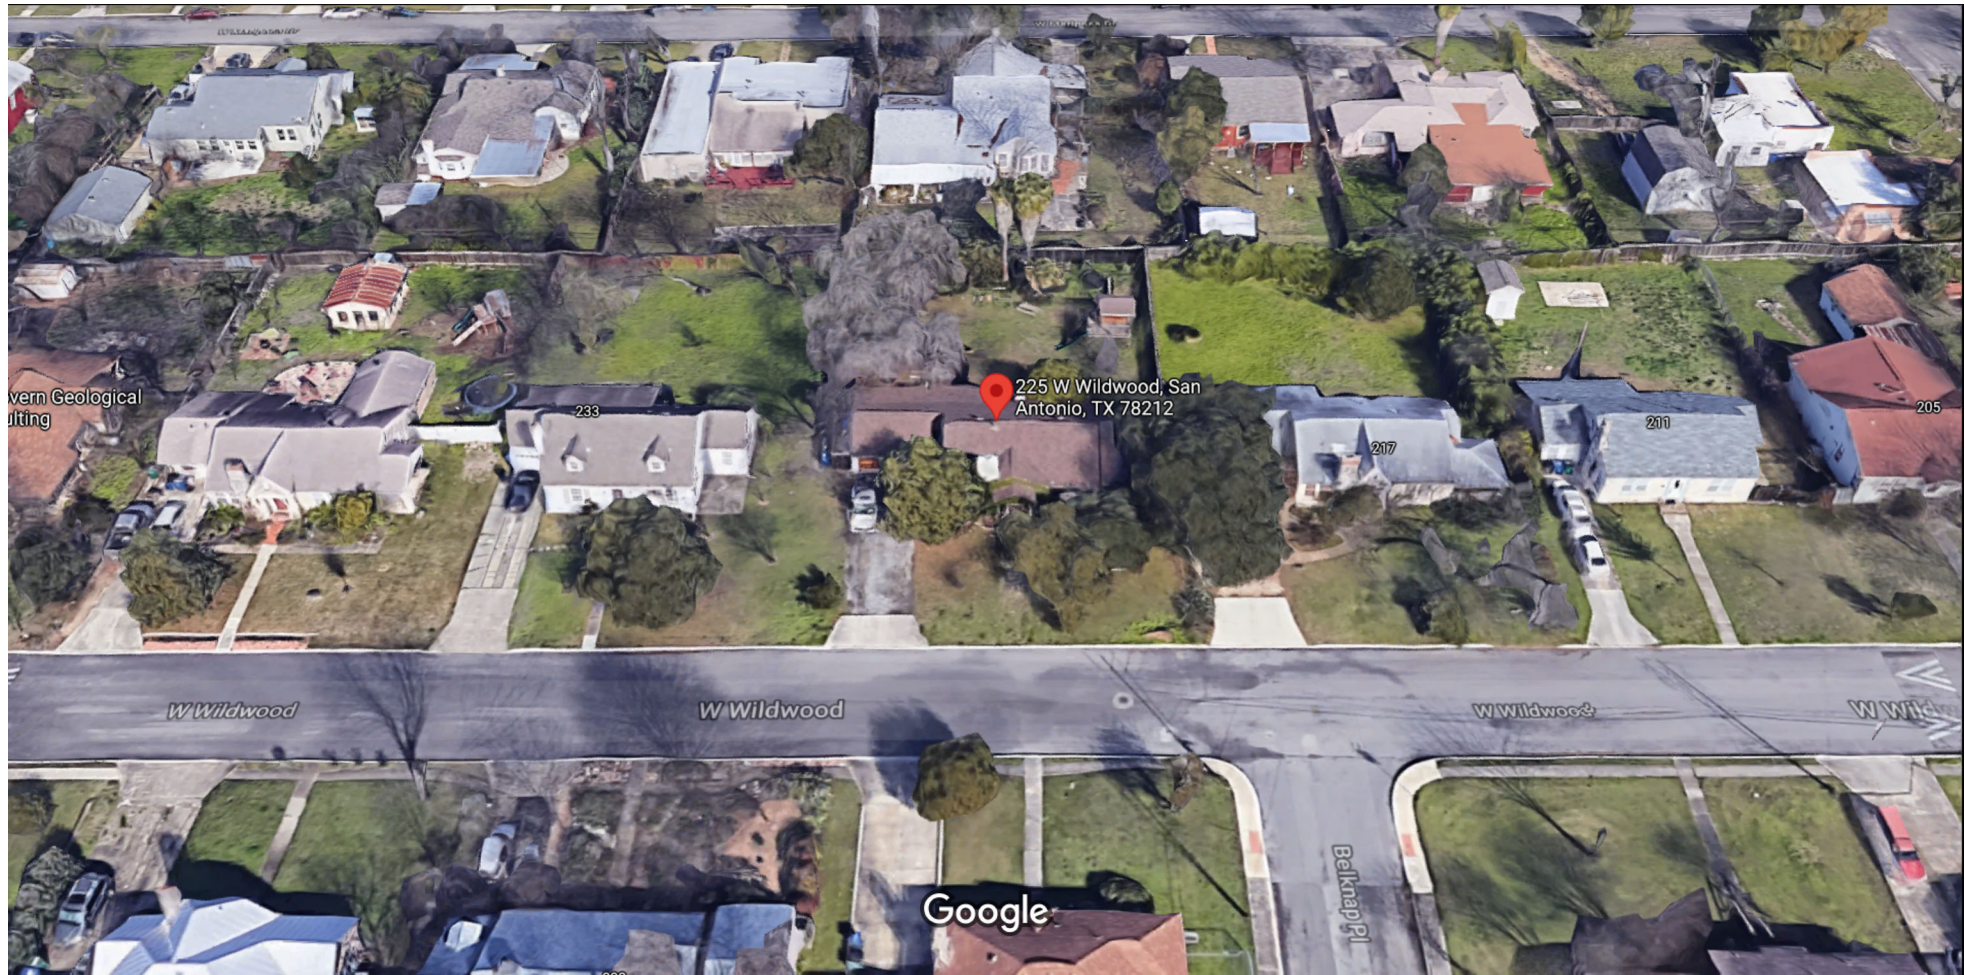

Imagery ©2021 Google, Map data ©2021 , Map data ©2021 20 ft

Google Maps 225 W Wildwood

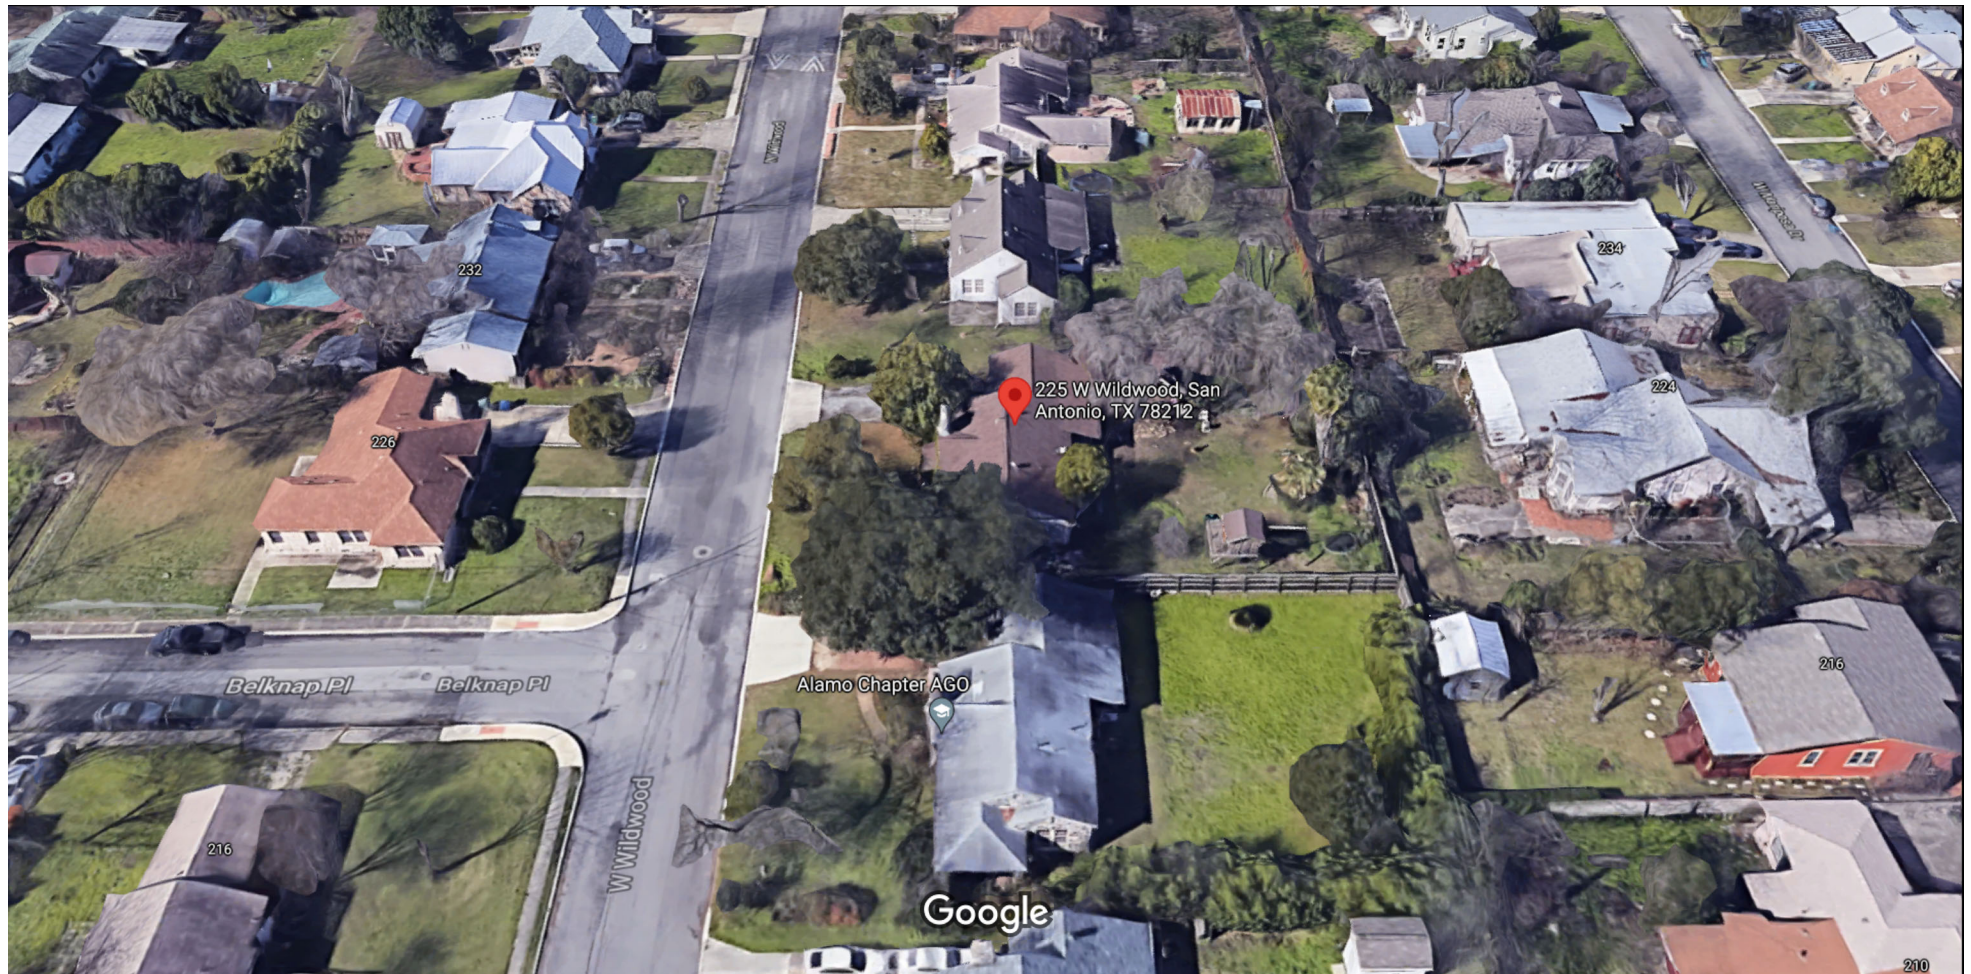

Imagery ©2021 Google, Map data ©2021, Map data ©2021 20 ft

Google Maps 225 W Wildwood



Imagery ©2021 Google, Map data ©2021 , Map data ©2021 20 ft

Google Maps 225 W Wildwood



Imagery ©2021 Google, Map data ©2021 , Map data ©2021 20 ft







